User's Manual

CAR CAMCORDER

-English-

Welcome

Thank you very much for purchasing our product.
Before you start enjoying this product it's recommend to read this user's manual and follow the instructions step by step to get the best result with your new product.

Best Regards,
Service Team

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subjected to the following two conditions: (1) this device may not cause harmful interference, and(2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in residential installations. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television equipment reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Move the equipment away from the receiver.
- Plug the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for additional suggestions.

You are cautioned that any change or modifications to the equipment not expressly approved by the party responsible for compliance could void your authority to operate such equipment.

Important Notice

- Do not drop, puncture or disassemble the device; otherwise the warranty will be voided.
- Avoid all contact with water, and dry hands before using.
- Use the device with care. Avoid pressing hard on the device body.
- For your own safety, avoid using the device when there is a storm or lightning.
- Use only the accessories supplied by the manufacturer.
- Keep the device out of the reach of infants.
- When you get off the car, do not leave the device on the dashboard that is subject to direct sunlight.
- For your own safety, do not operate the controls of the product while driving. This product is intended to be used as a car recorder aid only.
- For more details, please download the complete user manual from the official website. (http://www.aiptek.tw/download.php)

CE Regulatory Notice

This equipment complies with the requirements set out in the Council Directives on the Approximation of the Laws of the Member States relating Electromagnetic Compatibility (2004/108/EC); the Low Voltage Directive (2006/95/EC); the Restriction of The Use of Certain Hazardous Substances in Electrical And Electronic Equipment Directive (2002/95/EC), Turkish EEE Directive; the Commission Regulation (EC) No 1275/2008 implementing Directive 2005/32/EC of the European Parliament and of the Council with regard to eco-design requirements for standby and off mode electric power consumption of electrical and electronic household and office equipment, and the Directive 2009/125/EC of the European parliament and of the council establishing a framework for the setting of eco-design requirements for energy-related products.

Notes on Installation

- Install the device near the rear-view mirror to obtain the best open-field view.
- Make sure that the lens is within the wiping range of the windscreen wiper to ensure a clear view even when it rains.
- Do not touch the lens with your fingers. Finger grease may be left on the lens and will result in unclear videos or snapshots. Clean the lens on a regular basis.
- Do not install the device on a tinted window. Doing so may damage the tint film.
- Make sure that the installation position is not hindered by the tinted window.

Caution

- Use the authorized charger only.
- Never disassemble by yourself.
- Never short-circuit the battery.
- Dispose of the battery properly.
- Exposing the battery to open flames can cause explosion.

If the time arises to throw away your product, please recycle all the components possible.
Batteries and rechargeable batteries are not to be disposed in your domestic waste!
Please recycle them at your local recycling point.
Together we can help to protect the environment.

Contents

1 Introduction 7

1.1 Features 7

1.2 Package Contents 7

1.3 Product Overview 8

2 Getting Started 9

2.1 Inserting the Memory Card 9

2.2 Installing in Vehicles 10

2.2.1 Mount to Windshield 10

2.2.2 Adjust Device Position 10

2.3 Connecting to Power 11

2.4 Powering the Device On / Off 12

2.4.1 Auto Power On/Off 12

2.4.2 Manual Power On/Off 12

2.5 Initial Settings 13

2.5.1 Set Automatic Recording 13

2.5.2 Set the Date and Time 13

3 Using the Car Recorder 14

3.1 Recording Videos 14

3.1.1 Record videos while driving 14

3.1.2 Record all other types of videos 14

3.1.3 Emergency Recording 15

3.1.4 The Recording Screen 16

3.1.5 Using the LED Light 17

3.1.6 Taking Snapshot 17

3.2 Playback Videos and Photos 18
3.2.1 Playing Videos 19
3.2.2 Viewing Photos 19
3.2.3 The Playback Screen 20
3.2.4 Deleting Files 21

4 Adjusting the Settings 22

4.1 Using the Menu 22
4.2 Menu Tree 23

5 Installing the Software 25

6 Specifications 26

1. Introduction

Thank you for purchasing this advanced Car Recorder. This device is specifically designed for real time video and audio recording when driving.

1.1 Features

- Full HD camera (1920x1080 @ 30fps)
- 2.4" LCD color screen
- Wide angle lens
- High power LED for low light environments
- Motion detection
- Automatic Emergency recording for collision detection
- Supports SDHC up to 32GB

1.2 Package Contents

The package contains the following items. In case there is any missing or damaged item, contact your dealer immediately.

Car Recorder

Bracket

CD-ROM



Quick start guide

Car adapter

1.3 Product Overview

Top and Bottom Views



Front View

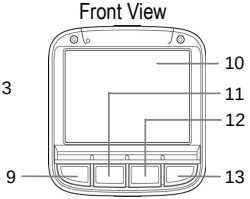

Side (Left and Right) Views

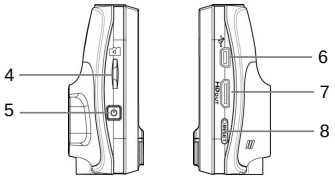

Rear View

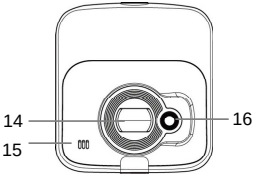

No.	Item
1	Microphone
2	Bracket Socket
3	Bracket Socket
4	Memory Card Slot
5	Power Button
6	USB Connector
7	HD Connector
8	Reset Button

No.	Item
9	Back Button (⮌)
10	LCD Panel
11	Up Button (▲)
12	Down Button (▼)
13	Enter Button (OK)
14	Wide Angle Lens
15	Speaker
16	LED Light

Note: To operate the device, press the corresponding buttons ((9, 11, 12, 13) according to guide icons shown the screen.

2. Getting Started

2.1 Inserting the Memory Card

Insert the memory card with the gold contacts facing the back of the device. Push the memory card until it clicks into place.

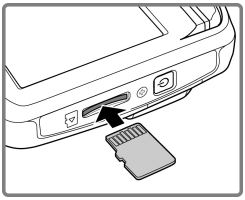

To remove the memory card

Push to eject the memory card out of the slot.

Note: Do not remove or insert the memory card when the device is turned on. This may damage the memory card.

2.2 Installing in Vehicles

2.2.1 Mount to Windshield

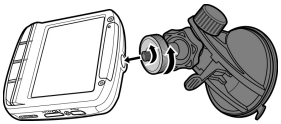

1. Attach the device to the bracket base. Turn and tighten the car holder and the bracket base to make sure the device is securely locked in place.
2. With the suction-cup laying flat, position the suction-cup on the windshield.
3. Hold the base firmly on the windshield and press down the clamp to mount the car holder to the windshield. Make sure the base is securely locked in place.

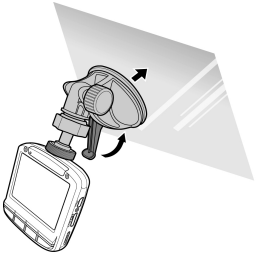

2.2.2 Adjust Device Position

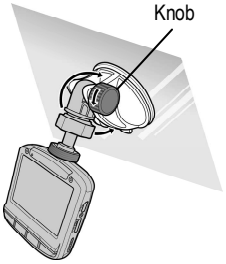

Rotate the knob to swivel the device vertically.

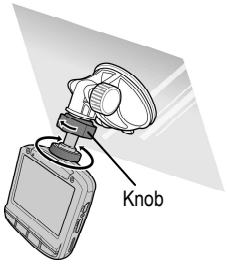

Rotate the knob to swivel the device horizontally up to 360°.

2.3 Connecting to Power

Use only the supplied car adapter to power up the device and charge the built-in battery.

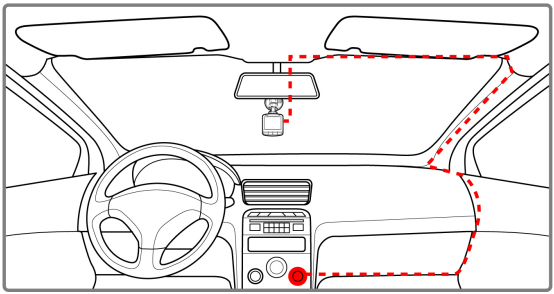

1. Connect one end of the car adapter to the USB connector of the device.
2. Plug the other end of the car charger to the cigarette lighter socket of your vehicle. Once the vehicle engine is started, the device automatically turns on.

Note:

The orange LED lights up while the battery is charging.

Please take note if the environment temperature reaches 45℃ or above, the car adapter still can supply power to device, but it will not charge the Lithium-ion battery. This is the characteristic of Lithium-ion and is not a malfunction.

2.4 Powering the Device On / Off

2.4.1 Auto Power On/Off

Once the vehicle engine is started, the device automatically turns on. If the *Automatic Record* function is enabled, the recording will automatically start right after the device turns on.
See ***Set Automatic Recording*** (2.5.1).

Once the vehicle engine shuts down, the device automatically saves the recording and turns off the power within 10 seconds.
See ***Delay Shutdown*** (4.2).

2.4.2 Manual Power On/Off

To manually turn on the power, press the **POWER** button.

To turn off, press and hold the **POWER** button
for at least 2 seconds.

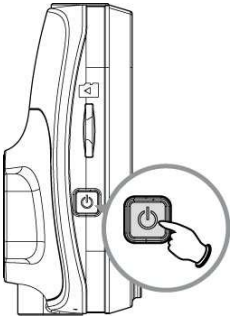

2.5 Initial Settings

Before using the device, we recommend you to enable the Automatic Record function and set up the correct date and time.

2.5.2 Set Automatic Recording

To enable the recording to start automatically after you turn on the power, do the following:

1. Press the ⮌ button to enter the OSD menu.
2. Press the ▲/▼ button to select **Automatic Record** and press the OK button.
3. Press the ▲/▼ button to select **On** and press the OK button.
4. Press the **BACK** button to exit the menu.

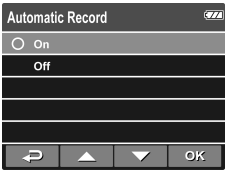

2.5.3 Set the Date and Time

To set the correct date and time, do the following:

1. Press the ⮌ button to enter the OSD menu.
2. Press the ▲/▼ button to select **Date / Time** and press the OK button.

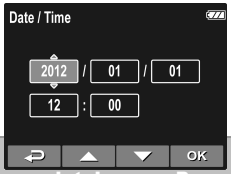

3. Press the ▲/▼ button to adjust the value and press the OK button to move to another field.
4. Repeat step 3 until the date and time setting is complete.

3. Using the Car Recorder

3.1 Recording Videos

3.1.1 Record videos while driving

When the vehicle engine starts up and the *Automatic Record* function is enabled, the device automatically turns on and starts recording.

Recording will automatically stop when the engine is switched off. Or, press the ▼ button to stop recording manually.

Note:

On some cars, the recording will continue when the engine is switched off.

If this happens, do one of the following:

- Manually turn off the cigarette lighter.
- Remove the car adapter from the cigarette lighter.

3.1.2 Record all other types of videos

1. Press the OK button to start recording.
2. Press the ▼ button to stop recording.

Note:

One video file is saved for every 3 or 5 minutes of recording. See ***Using the* Menu** (4.1).

The device saves the recording in the memory card. If the memory card capacity is full, the oldest file in the memory card is overwritten.

3.1.3 Emergency Recording

During video recording, press the **OK** button to continuously record the video in one file until the memory card storage is full or the recording is manually stopped.
To stop the recording, press the ▼ button.

Note: If the *Collision Detection* function is enabled and a collision is detected, the device will automatically trigger the emergency recording. See ***Using the* Menu** (4.1).

3.1.4 The Recording Screen

No.	Item	Description
1	Duration	Indicates the recording duration.
2	Date and time	Indicates the current recording date and time.
3	Guide icon (Menu)	Press the ↩ button to enter the OSD menu.
4	Battery	Indicates the remaining battery power.
5	Guide icon (Stop)	Press the ▼ button to stop the recording.
6	Guide icon (Emergency)	Press the OK button to continuously record the video in one file until the recording is manually stopped.
7	Guide icon	Press the ▲ button to switch to

	(Playback)	Playback mode.

3.1.5 Using the LED Light

You can use the LED light to provide extra light when the lighting is insufficient.

To enable the LED light, do the following:

1. Press the ↩ button to enter the OSD menu.
2. Press the ▲/▼ button to select **Auxiliary Light** and press the **OK** button.
3. Press the ▲/▼ button to select **On** and press the **OK** button.
4. Press the ↩ button to exit the menu.

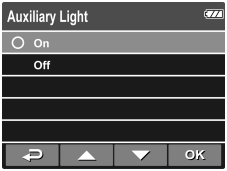

Note:

Turn off LED lights when the battery is low.

When using LED lights for a long time, it may become hot. Take care not to touch the hot LED lights.

3.1.6 Taking Snapshot

You can also use this device to take snapshots of the current scene.

From the standby screen, press the ▼ button to take a snapshot.

Note: If recording is in progress, press the ▼ button to stop the recording.

3.2 Playback Videos and Photos

1. If recording is in progress, press the ▼ button to stop recording. The standby screen is displayed.
2. Press the ⮌ button to enter the OSD menu.
3. Press the ▲/▼ button to select the file category that you want to browse and press the OK button.
4. Press the ▲/▼ button to view the next or the previous file and press the OK button to view the file in full screen.

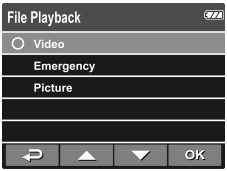

Note: From the standby screen, you can directly enter Playback mode by pressing ▲ button. The last recorded video is displayed on the screen.

3.2.1 Playing Videos

To play videos, do the following:

1. If recording is in progress, press the ▼ button to stop recording.
2. Press the ⮌ button to enter the OSD menu.
3. Press the ▲/▼ button to select **File Playback** and press the OK button.
4. Press the ▲/▼ button to select **Video** or **Emergency** and press the OK button.
5. Press the ▲/▼ button to browse for the desired video file and press the OK button to play the video.
6. Press the OK button to pause the playback. Press it again to resume.

3.2.2 Viewing Photos

To view photos, do the following:

1. If recording is in progress, press the ▼ button to stop recording.
2. Press the ⮌ button to enter the OSD menu.
3. Press the ▲/▼ button to select **File Playback** and press the OK button.
4. Press the ▲/▼ button to select **Picture** and press the OK button.

5. Press the ▲/▼ button to browse for the desired photo file and press the OK button to view the file in full screen.

3.2.3 The Playback Screen

Video Playback Screen

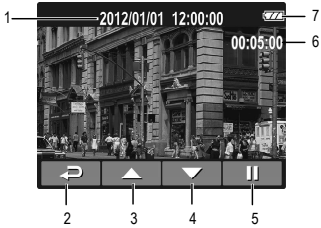

Photo Playback Screen

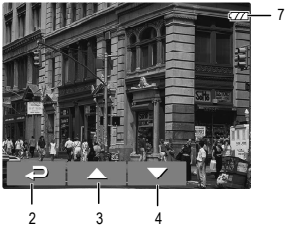

No.	Item	Description
1	Date and time	Indicates the recorded date and time.
2	Guide icon (Back)	Press the ⮌ button to return to file selection display.
3	Guide icon (Previous)	Press the ▲ button to view the previous video/photo.
4	Guide icon (Next)	Press the ▼ button to view the next video/photo.
5	Guide icon (Pause)	Press the OK button to pause the video playback.
6	Duration	Indicates the elapse time.
7	Battery	Indicates the remaining battery power.

3.2.4 Deleting Files

To delete file(s), do the following:

1. If recording is in progress, press the ▼ button to stop recording.
2. Press the ⮌ button to enter the OSD menu.
3. Press the ▲/▼ button to select **File Deletion** and press the OK button.
4. Press the ▲/▼ button to select the file category and press the OK button.

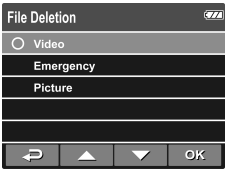

5. Press the ▲/▼ button to select the file that you want to delete and press the OK button to enter the Delete menu.

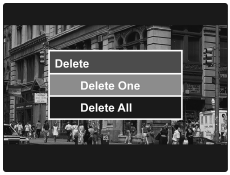

6. Press the ▲/▼ button to select an option.

Item	Description
Delete One	Delete the current file.
Delete All	Delete all files.

7. Press the OK button to confirm delete.

Note: Deleted files cannot be recovered. Ensure the files have backup before deletion.

4. Adjusting the Settings

4.1 Using the Menu

You can customize the video recording and other general settings via the on-screen display (OSD) menus.

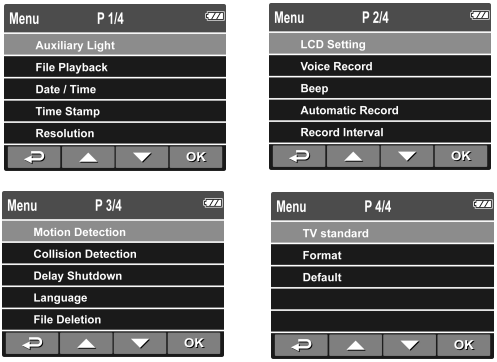

1. If recording is in progress, press the **Record** button to stop recording.
2. Press the ↩ button to open the OSD menu.
3. Press the ▲/▼ button to select a menu option and press the OK button to enter the selected menu.
4. Press the ▲/▼ button to select the desired setting and press the OK button to confirm the setting.

5. Press the ⮌ button to exit the menu.

4.2 Menu Tree

Refer to the below table for details on menu items and available menu options.

Menu option	Description	Available option
Auxiliary Light	Enable/Disable the LED light.	On / Off
File Playback	Select the file category that you want to view.	Video / Emergency / Picture
Date / Time	Set the date and time.	
Time Stamp	Enable/Disable the date stamp.	On / Off
Resolution	Set the video resolution.	1080P(1920x1080) / 720P(1280x720)
LCD Setting	Set the duration for the display to automatically turn off right after video recording starts.	On / Turn Off After 30 Sec. / Turn Off After 3 min. / Off
Voice Record	Enable/Disable the voice recording.	On / Off
Beep	Enable/Disable the beep.	On / Off
Automatic Record	Enable/Disable the device to automatically record video after the device is turned on.	On / Off
Record Interval	Set the recording duration for each recorded video file.	3 mins / 5 mins
Motion Detection	Enable/Disable the motion detection. If this function is enabled and the device detects any object movement,	On / Off

Menu option	Description	Available option
	it will automatically start the recording.	
Collision Detection	Enable/Disable the collision detection. If this function is enabled and any collision is detected, the device will automatically trigger the emergency recording.	High Sensitivity / Normal Sensitivity / Low Sensitivity / off
Delay Shutdown	Set the delay duration before turning off the power.	10 Sec. / Off
Language	Set the on-screen display menu language.	
File Deletion	Delete the file(s).	Video / Emergency / Picture
TV standard	Set the TV type based on your local region.	NTSC / PAL
Format	Format the memory card.	Yes / No
Default	Reset all settings to factory default settings.	Yes / No

5. Installing the Software

1. Place the attached CD ROM into the CD player.
2. If the CD does not execute automatically, please use Windows File Manager to execute the **Install_CD.exe** file in the CD.

   The following screen will be shown up.

3. Press the [Menu] item to start the installation process according to the instructions on-screen.

6. Specifications

Item	Description
Image sensor	5 Megapixel(s) CMOS sensor
Effective pixels	2592 (H) x 1944 (V)
Storage media	Support Micro SDHC, up to 32GB class 4 or above
LCD display	2.4" LCD color TFT (112K pixels)
Lens	Wide Angle Fixed Focus lens F2.8, f=3.0mm
Focus range	1.5m~Infinity
Movie Clip	Resolution: Full HD (1920 x 1080), 30fps HD (1280 x 720), 30fps
	Format: .mov
Still image (Snapshot)	Resolution: 5M (2592 x 1944)
	Format: DCF (JPEG, Exif: 2.2)
Shutter	Electronic shutter Auto:1/2 ~1/2000 sec.
G-Sensor	3-Axis G-Force sensor
ISO	Auto
White Balance	Auto
Assist Lamp	Yes
Microphone	Yes
Speaker	Yes
Interface	Mini USB, Mini C Type HDMI

Item	Description
Battery	Built-in 470mAH Li-polymer rechargeable
Power supply	Cigar car charger (Inpugt:12V~24V/1.0A) 5V/1A adaptor (Input AC 100V~240V, 50/60Hz)
Operating Temperature	0°~ 60°C
Storage Temperature	-20°~ 80°C
Dimensions	65 x 62 x 27 mm
Weight	Approx. 85g

Copyright © 2012

All rights reserved.

All other marks, products or company names mentioned in this guide are trademarks of their respective companies.